

M4-ATX-HV

6-34V Intelligent ATX Power Supply



Installation Guide

Version 1.0e

P/N M4-ATX-HV-01

Before you start...

Please take a moment and read this manual before you install the M4-ATX-HV in your vehicle. Often times, rushing into installing the unit can result in serious damage to your M4-ATX-HV board, computer and probably your car's electrical system. **Always double check the polarity of your wires with a voltmeter.**


Avoid using the cigarette plug as a power source, often times the contacts are not capable of delivering high current to your PC.


Introduction

Thank you for purchasing the M4-ATX-HV power sequencer / vehicle ATX power supply.

The M4-ATX-HV was designed to work with a wide variety of main boards ranging from low power to fully fledged Intel, AMD or VIA motherboards. This PSU has been optimized to work in the high voltage range of 24-34V, offering a range of 6-34V.

M4-ATX-HV Logic Diagram

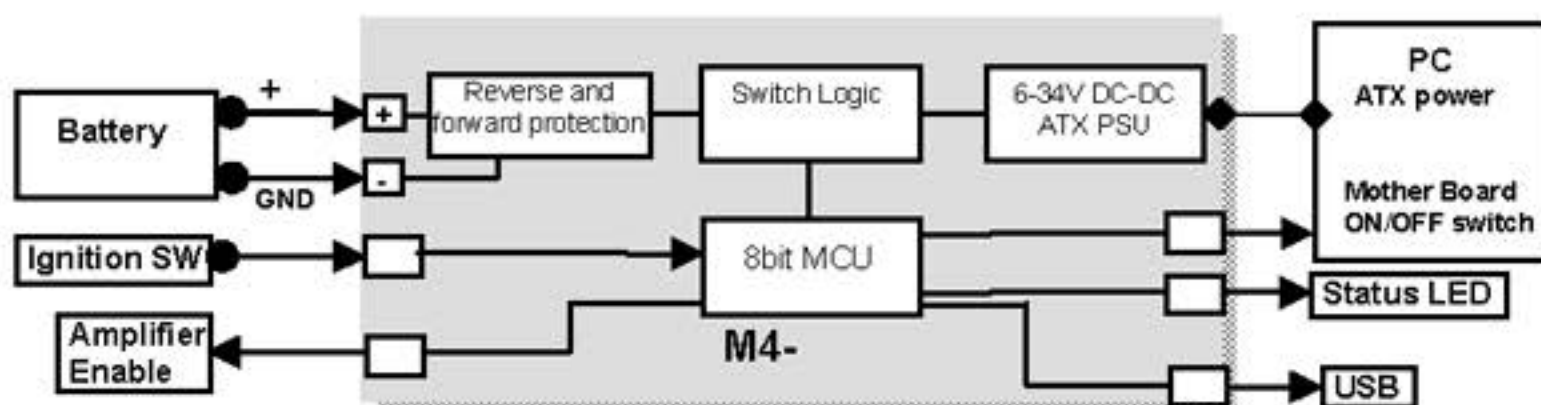

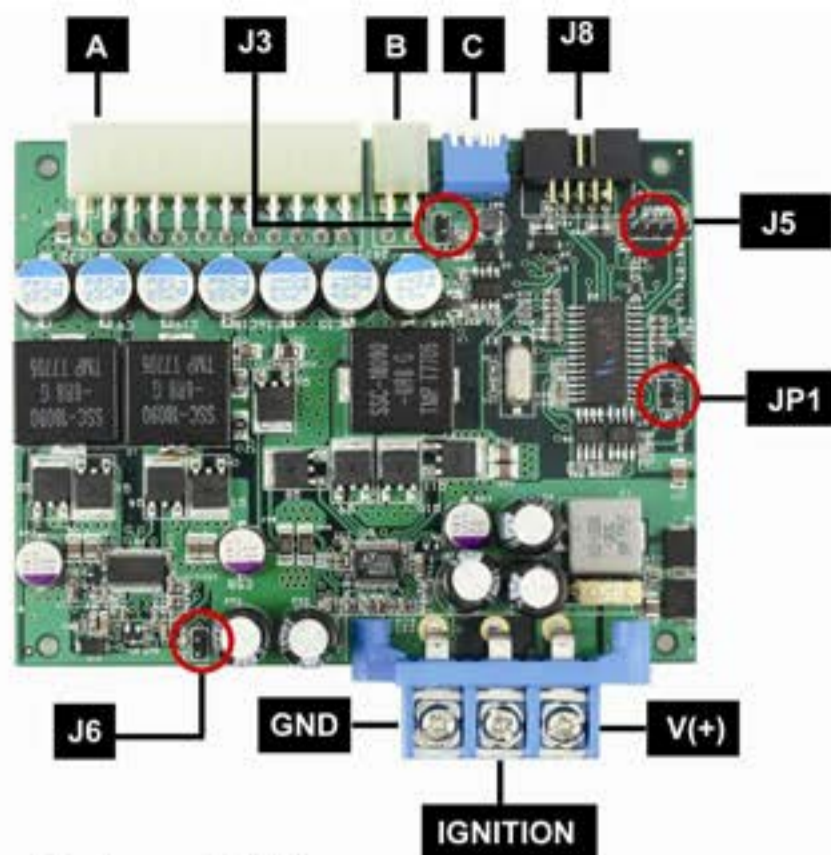

Power Input Connectors (bottom, right)

Left Battery negative (GND)
 Center Ignition (To start connect to Battery +).
Do not use in the standard PSU mode (mode P0)

Right Battery positive (+)

(A) ATX Power Output Connector 20/24 pin connector

(B) 12V-ATX power output connector 4 pin


(C) Configuration dip switches

(J5) For internal use only (do not use)


(J6) Amplifier THUMP wire harness (connects to the M4-ATX-HV pin header)

(J3) Fan Header. Positive pin is closest to "J3" marking.

(J8) USB, Motherboard ON/OFF and THUMP (Thump also available on J6)

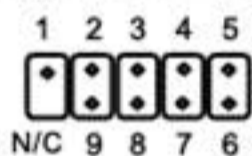

- 1) GND
- 2) GND
- 3) USB D+
- 4) USB D-
- 5) Vcc
- 6) To Motherboard ON/OFF
- 7) To motherboard ON/OFF
- 8) Amplifier Thump
- 9) GND
- 19 N/C (key)

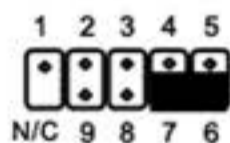

J8 shown with cable harness connected to the motherboard ON/OFF header (pin 7 and 6)

DIP Switch (ON=down)			P	Off-delay (All rails ON)	Hard-off (5VSB)
1	2	3			
OFF	OFF	OFF	P0	Standard PSU mode	
ON	OFF	OFF	P1	5sec + 1min AutoLatch*	1 min
OFF	ON	OFF	P2	1min + 1min AutoLatch*	NEVER
ON	ON	OFF	P3	1min + 1min AutoLatch*	1min
OFF	OFF	ON	P4	15min	1min
ON	OFF	ON	P5	15min	NEVER
OFF	ON	ON	P6	30min	1min
ON	ON	ON	P7	2hour	NEVER

IMPORTANT: Always use the "Hibernate" feature, never use "Standby" as it can severely discharge your battery over extended periods of time.

NEVER use "hard-off = NEVER" settings unless you understand the risks of battery depletion. Even with safety limits in place, your battery might not be able to start your engine. "Hard-off=NEVER keeps your 5VSB rail on at all times"

***AutoLatch** is active during the first 60s of PC operation (and only during the first 60 seconds). For example, if Ignition is turned ON and then OFF right away, M4-ATX-HV will latch Ignition in ON position for the next 60 seconds, **allowing your operating system to fully come up**. This will prevent disk drive corruption or systems that remain hung in the ON position. After the first 60 seconds of system operation, the Auto Latch feature will be removed and system will shut down as governed by the "Off-delay" setting.

P0: In this mode, the M4-ATX-HV behaves like a regular ATX power supply. If J6 is connected to the motherboard, M4-ATX-HV will also send a gratuitous "ON pulse" to the motherboard right after power is first applied.

P1 (recommended): Sends ON pulse to motherboard when ignition is ON for more than 5 seconds, sends OFF pulse to motherboard **5 seconds** after ignition is turned off. Waits another **60 seconds** and then shuts down 5VSB to conserve battery. In this mode, the M4-ATX-HV consumes less than 0.5mA.

NOTE: Should you need to **reset to factory defaults** (in case changes were made via the USB uplink), simply power off the unit, connect a jumper to JP1 and then apply power back up for more than 2 seconds. The LED light will start to flash

rapidly indicating that the factory defaults were loaded. **Don't forget to Remove jumper!** Disconnect M4-ATX-HV from battery for at least few seconds. You are done!

Power challenges in a vehicle PC: One of most difficult tasks of operating a PC in a vehicle is power consumption while the computer is OFF. Even when your computer is OFF or in Suspend, it will still consume about 50-150mA on the 5VSB rail.

The M4-ATX-HV is addressing these issues by cutting off the 5VSB rail after a pre-defined amount of time (see jumper chart, HARDOFF). During HARDOFF if the battery level drops below 11.2V for more than one minute, M4-ATX-HV will shut down and re-activate only when the input voltage is above 12V.

Engine Cranks, under-voltage and over-voltage situations. Another difficult task is maintaining stable power to your PC. While car batteries are rated at 12V, they actually provide voltages in between 8-16V (engine cranks) or as high as 80 volts (load dump). Most times, your battery will stay at 13.5V but extra precautions need to take place in order to prevent such situations. M4-ATX-HV operates as low as 6V and as high as 34V while providing strict regulation as well as input voltage clamping and reverse protection.

Anti-Thump: If your PC is connected to your car amplifier, you will hear a loud pop when the computer is first started. The M4-ATX-HV has an 'anti-thump' control that will keep your amp OFF while the PC starts. Simply connect the 2 pin wire to J6 harness to your amplifier remote control pins. The pin at the edge of the PCB is GND, inner pin is HOT.

Mode of operation explained

- 1) Ignition=OFF. Nothing happens. M4-ATX-HV is waiting for ignition signals.
- 2) Ignition=ON. M4-ATX-HV waits for few seconds then turns on the 5VSB rail. After another second M4-ATX-HV sends an "ON" signal to the motherboard via the 2 wires connected to the motherboard's ON/OFF pins. The motherboard will turn ON and your system should start booting. The Ignition state will be latched for 60 more seconds so that the motherboard will have a change to come up in a clean manner.
- 3) Ignition=ON. Your computer will remain ON.
- 4) Ignition=OFF. M4-ATX-HV waits for "OFFDELAY" in seconds (see jumper chart) and then it turns the motherboard OFF by sending a signal to the motherboard's ON/OFF switch. Your computer should turn off gracefully (shutdown procedure). After shutdown, 5VSB will still be provided for another "HARDOFF" seconds. In the event where the shutdown process is

longer than "HARDOFF" (Operating System gets frozen, etc), power will be shut down hard, turning off all power rails. During the HARDOFF procedure, the battery levels will be constantly monitored to prevent deep discharge situations.

5) M4-ATX-HV will go to step 1, if ignition is turned ON again.

NOTE. When all dip switches are off, M4-ATX-HV acts as a regular power supply. M4-ATX-HV will also send a gratuitous "ON" pulse (to the ON/OFF motherboard pins, should you have a wire harness connected to it) when power is applied for the first time. Do not connect the on/off switch if you don't want your PC to be started automatically.

M4-ATX-HV Characteristics

Minimum Input Operating. voltage	6V
Maximum input Operating voltage	34V (clamping occurs at 36-38V range)
Deep-Discharge shutdown threshold	11.2V
Input current limit (fuse protected)	Mini-blade 25A
Max Output Power	220 Watts / 275 watts peak
Deep Sleep Current Consumption.	< 1.6mA
Storage and operating temperature	-40 to +125 degrees Celsius (storage), 40 – 65C (operating)
MTBF	200,000 Hrs
Efficiency (Input 10-16V)	>94%, all rails combined, 50% load.
Input connectors	M4 screw terminal
Output Connector	ATX Power 24 pin (Molex P/N 39-01-2200)

*Unit shuts down when internal temperature sensor indicates > 85C. This value can be changed with software.

Maximum Power Characteristics

Output Rail	Current (Max)	Current Peak (<30 seconds)	Regulation
5V	12A	15A	1.5%
3.3V	12A	15A	1.5%
5VSB	1.5A	2A	1.5%
-12V	0.15A	0.2A	10%
12V	10A (see below)	12A (see below)	2%

When operating at <8V or >28V or extreme temperatures, de-rate by 30-50%, ventilation might be required. When operating at constant 160watts or more forced ventilation is required.

12V Rail Output Current (12V buck/boost converter)

Input (V)	12V out current	Input (V)	12V out current
6-8V	8A	11-16V	10A (12A peak)
8-11V	10A (12A peak)	16-34V	8A (10A peak)